



Manual plant sap sampling

Potato



Contact details

NovaCropControl
Gasthuisstraat 20
5061 PB Oisterwijk
The Netherlands
Info@novacropcontrol.nl
www.novacropcontrol.nl



Sampling and sending samples

Location

Take the following steps into account when collecting leaf samples:

- Avoid the outer rows of the field. Also avoid the first and last 10 meters of a row.
- Sample leaves with an average leaf quality. Sample abnormal plants with e.g. deficiency symptoms separately. Might a deficiency be present in the young or old leaves of the total crop, then sample these leaves regularly as a young or old leaf sample.
- Take into account the sunny and shady side of the plant. Always consistently sample the same side.

Time of sampling

It is strongly recommended to take the samples before 9:00 AM. The plant will then have enough leaf-tension with proper moisture conditions.


Begin with sampling after emergence, 1st time before the rows are closed. Sample every 3 to 4 weeks until the “bulking up” stage.

Plant parts

For sampling, take the **youngest, fully developed leaf** (see pic. 1). Also pick (separately) the **oldest, vital leaf**. Please remove the petioles from the leaf (see pic. 2). These petioles can have a significant effect on the analysis of the leaf sample.

It is not allowed to send in samples that have a fungal, bacterial or virus infection. The leaves must also be free from insects.



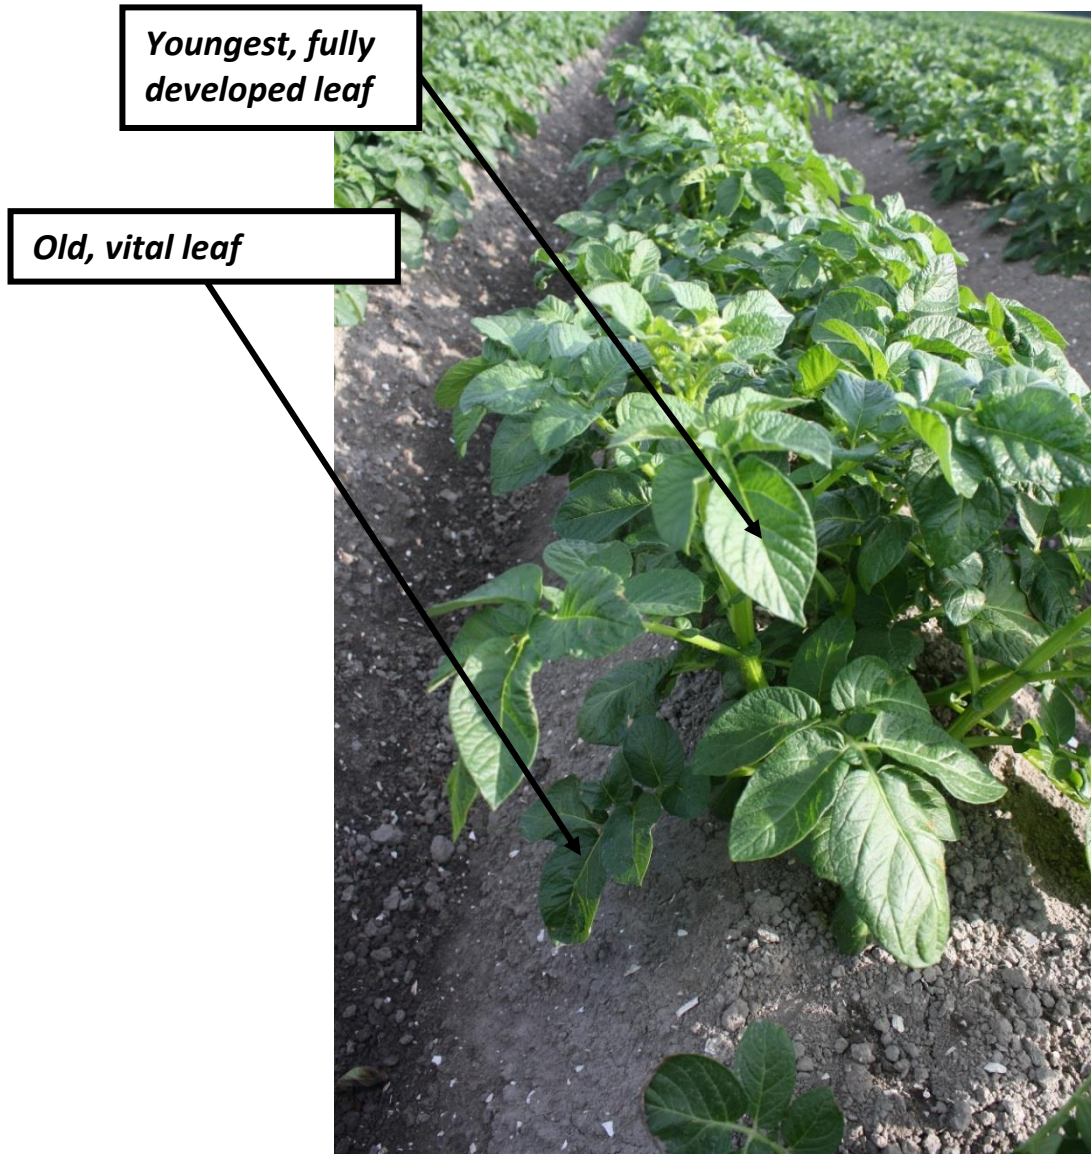

Pic. 1



Pic. 2





Sample size

For an average, representative sample about 30 leaves are needed, at least 150 grams. Of course sample size can vary, depending on leaf type (size and thickness). If you are unsure about the sample size, please feel free to contact us.

Packing the leaf samples

When leaves are humid because of rain or dew, please dry them with a tissue before you pack them. Leaves have to be dry from the outside to be analyzed because water will have an influence on the results. Moreover, the leaves will spoil faster if there is water in the sample bag.

Please pack the young and old leaf samples separately, these will be two different samples. To assure fluent processing please stack the leaves, fold the leaves if needed, and put them in a plastic zip-lock bag carefully. Make sure all air is out, so any leaf evaporation is excluded. See pictures (tomato leaf as an example).



Fill in the labels correctly and place them on the bags (see pictures below). We prefer pre-printed labels because it saves us a lot of administration time and reading errors. It has also advantages for you:

- When using Bemesting-Online program you need the same location names and crop names to make comparisons (graphs), pre-printed labels make this a lot easier;
- If our employees must read what is on the label, the chance of reading errors is very high, this is not the case with preprinted labels;
- You no longer must write the location and crop name on the label on the spot.

Let us know if you need help with this.





Sending the samples

The sample zip-lock bags with barcode can be sent in an envelope (make sure it fits in a mailbox (max 3,5 cm. high)). In case you want to send more than one sample, please send them together in 1 box, so they will arrive together. Then put sufficient postage on the envelope or package. Always check the weight. Please take care that envelopes are sealed well. You can put an extra tape over the closure to avoid opening during transportation.

We recommend to sample crops on Friday and send the same day by DHL or FedEx, then NovaCropControl is receiving your samples in the beginning of the next week. Please put €1.00 as the shipment value on the sample package.

Do you ship samples from outside Europe? To avoid clearance delay at the customs please consult our shipment guide for sending samples to Europe. You can find this guide at our website: <https://www.novacropcontrol.nl/en/sampling>

Please send samples to the address below:

NovaCropControl
Gasthuisstraat 20
5061 PB Oisterwijk
The Netherlands

